

ROCK

RO 071..

RO 071K..

RO 075..

RO 085..


RO 081..

RO 081K..

RO 135..


RO 131..

RO 131K..

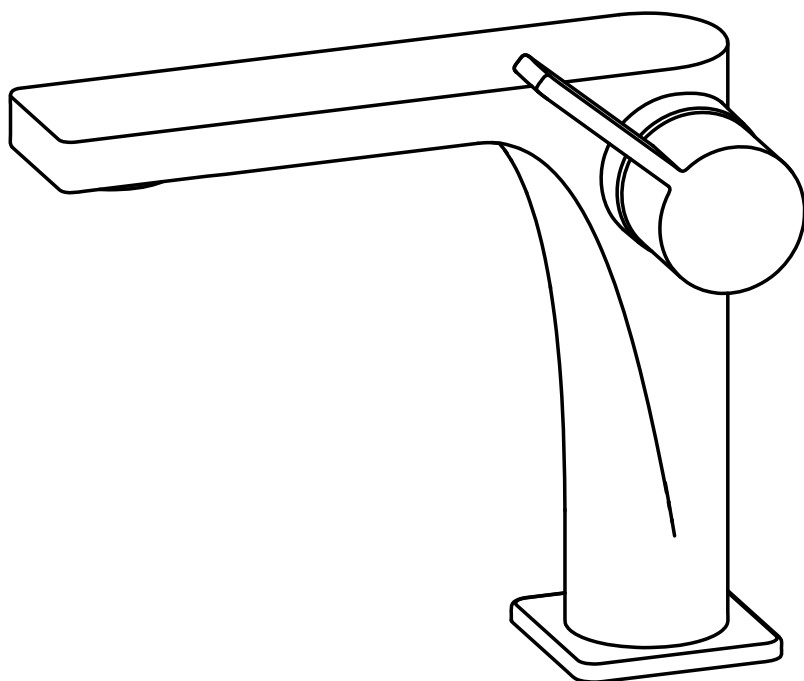

1


Montaggio Assembly

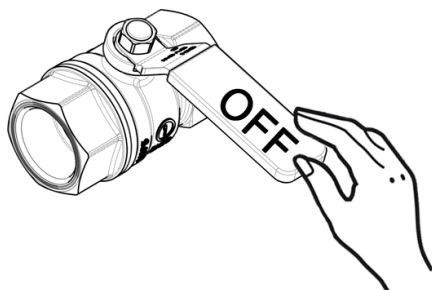


$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

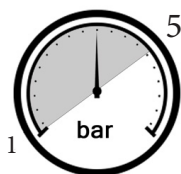

MIN - MAX

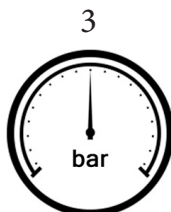

OK

2

a

071 071K 075


081 081K 085

131 131K 135

CH 30



b



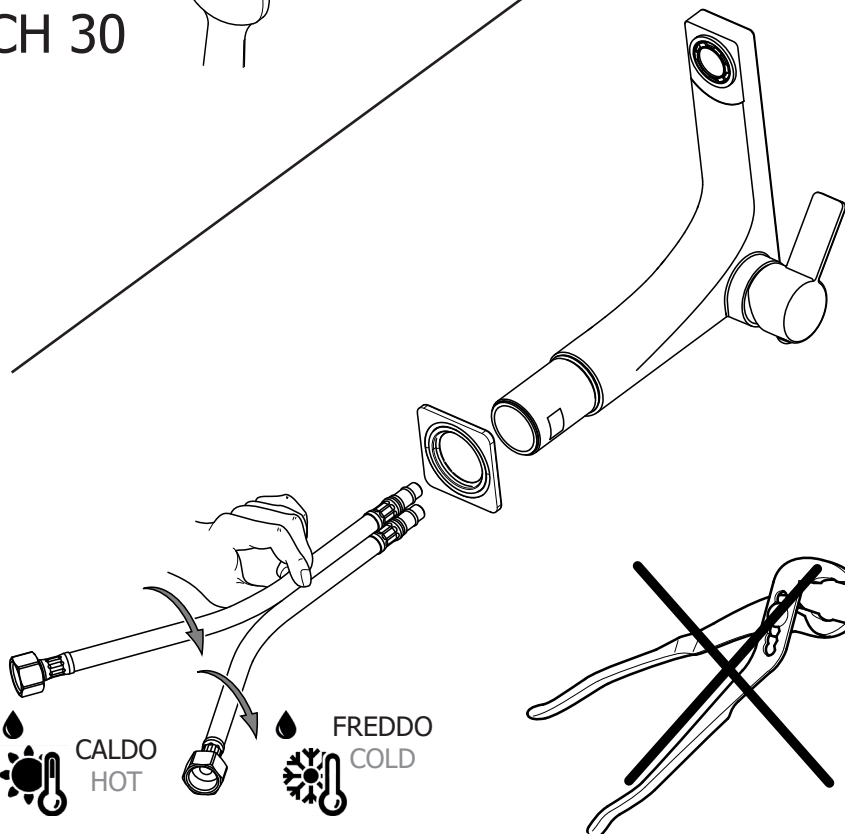


C

071 071K 075

081 081K 085

131 131K 135

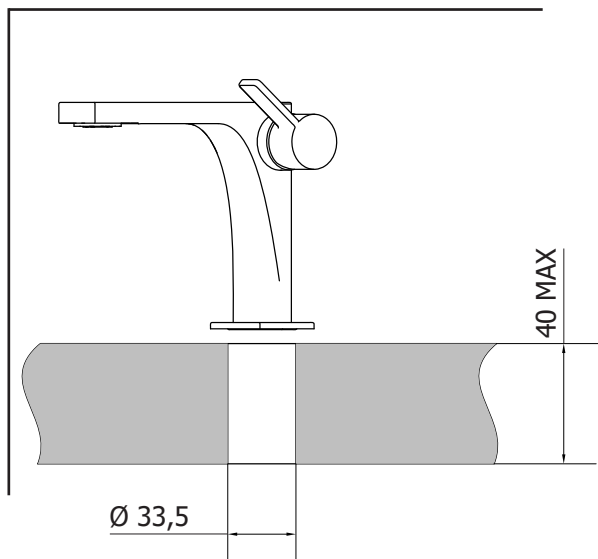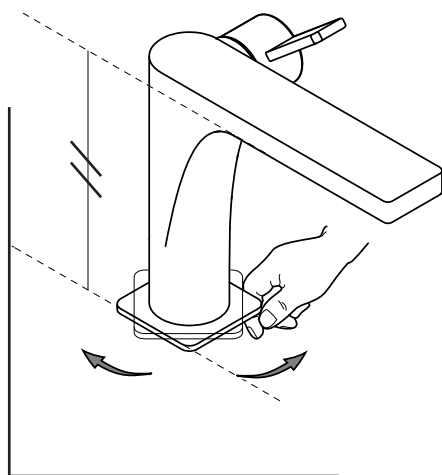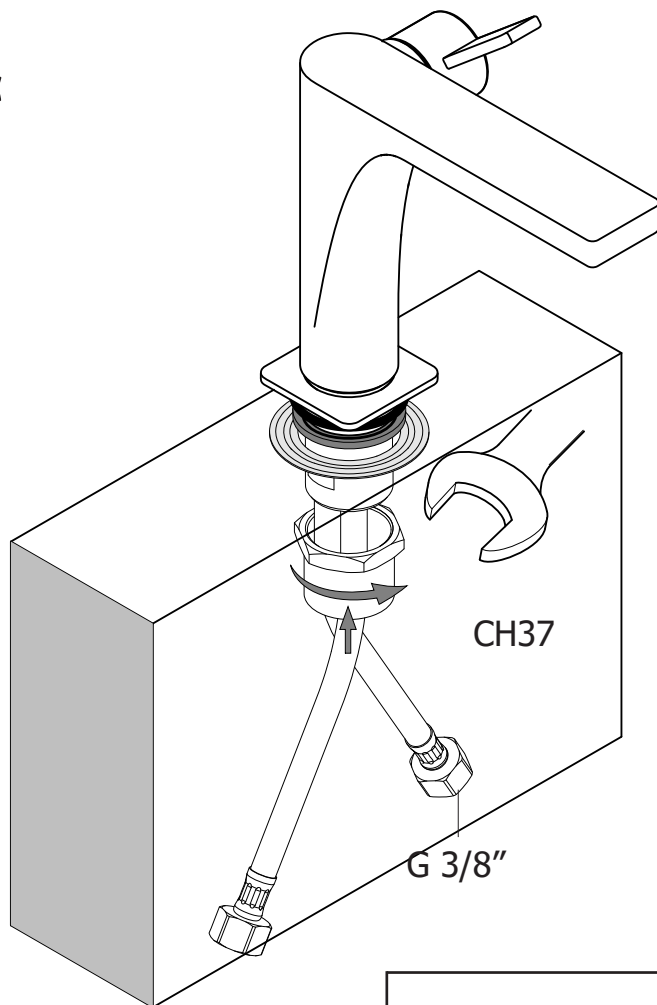

ZSCA050..


d

071K..


081K..

131K..



1

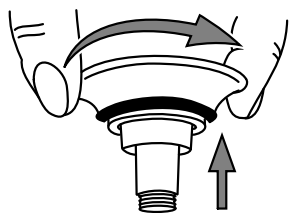

2

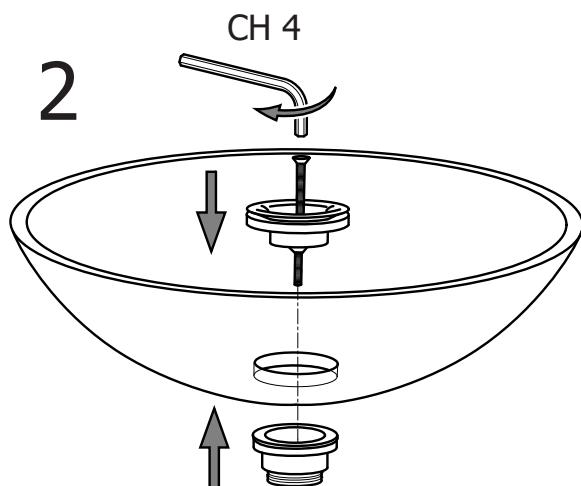

3


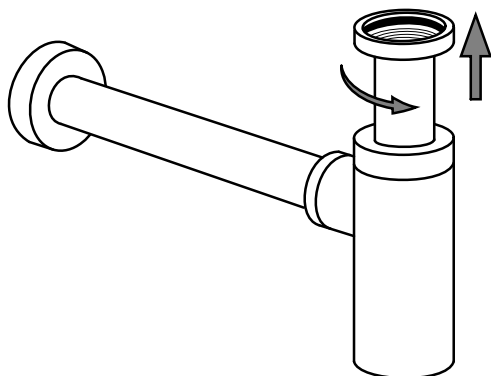
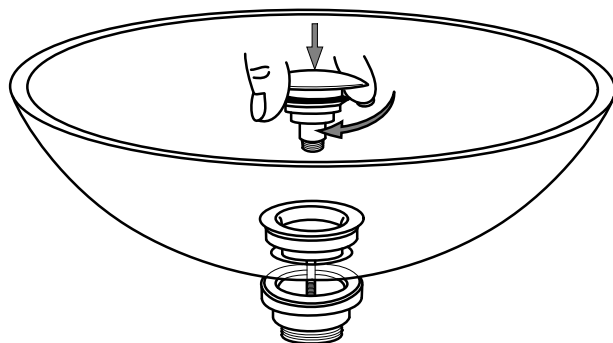


075

085

135

e

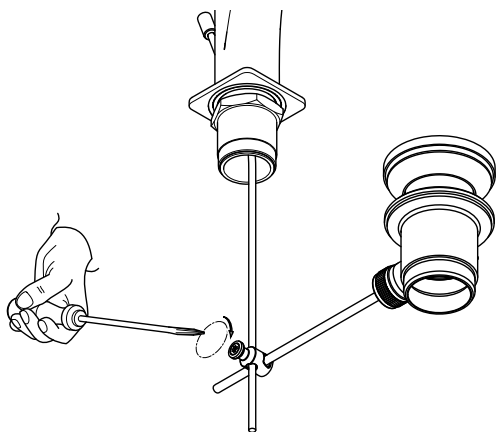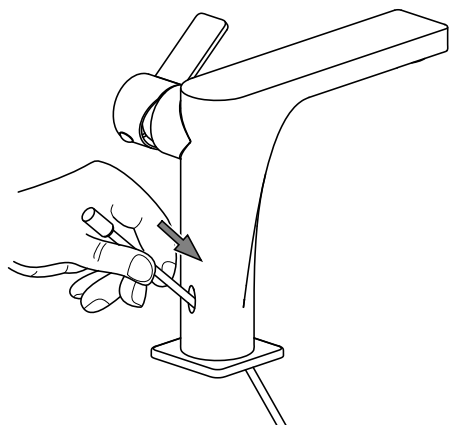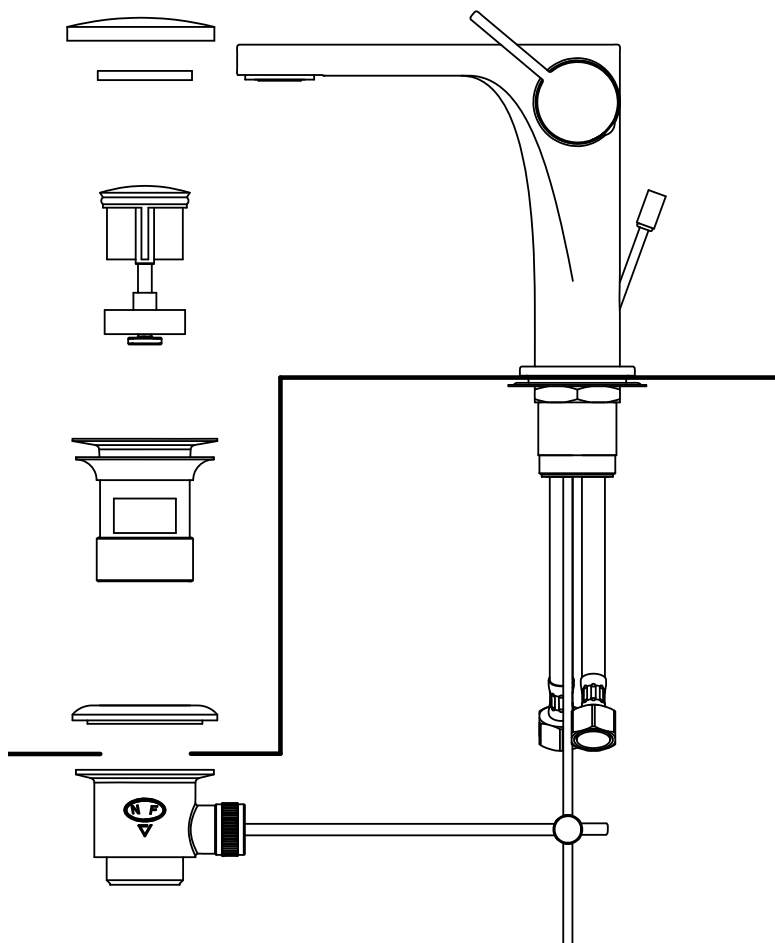


F

Funzionamento Working

081






081K

085

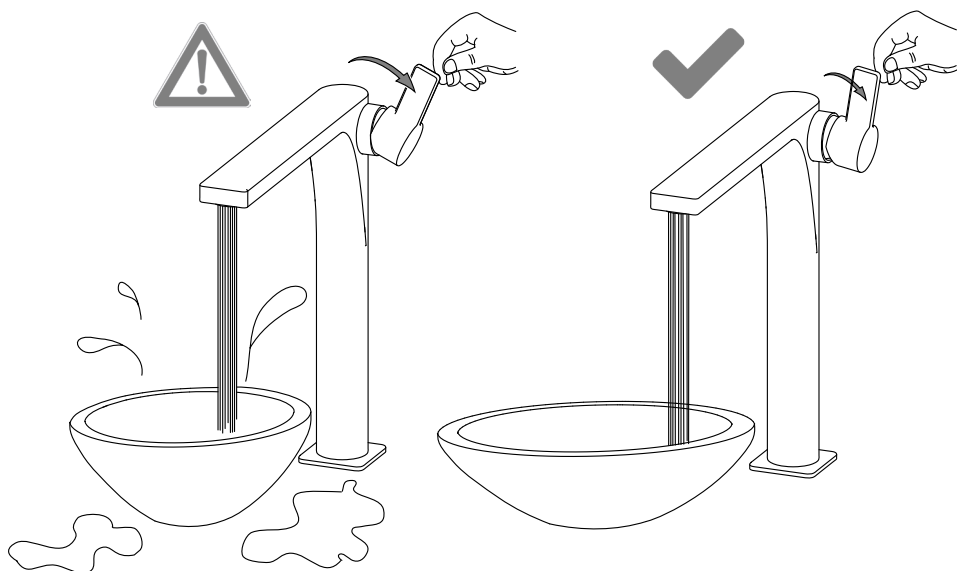

M

Manutenzione Service

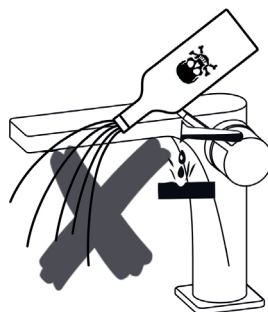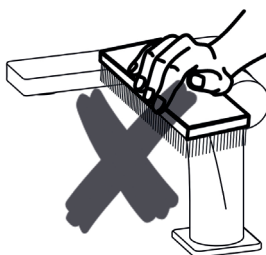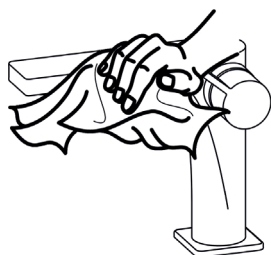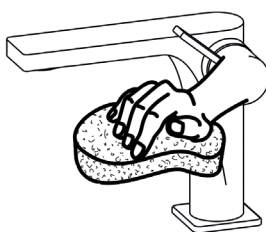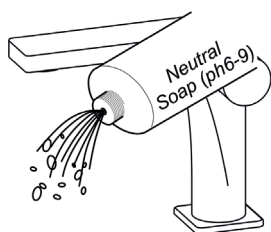


S Sostituzione Cartuccia How to replace Cartridge

a 071 071K 075
081 081K 085
131 131K 135

Sostituzione Aeratore How to replace Aerator

071 071K 075
081 081K 085
131 131K 135

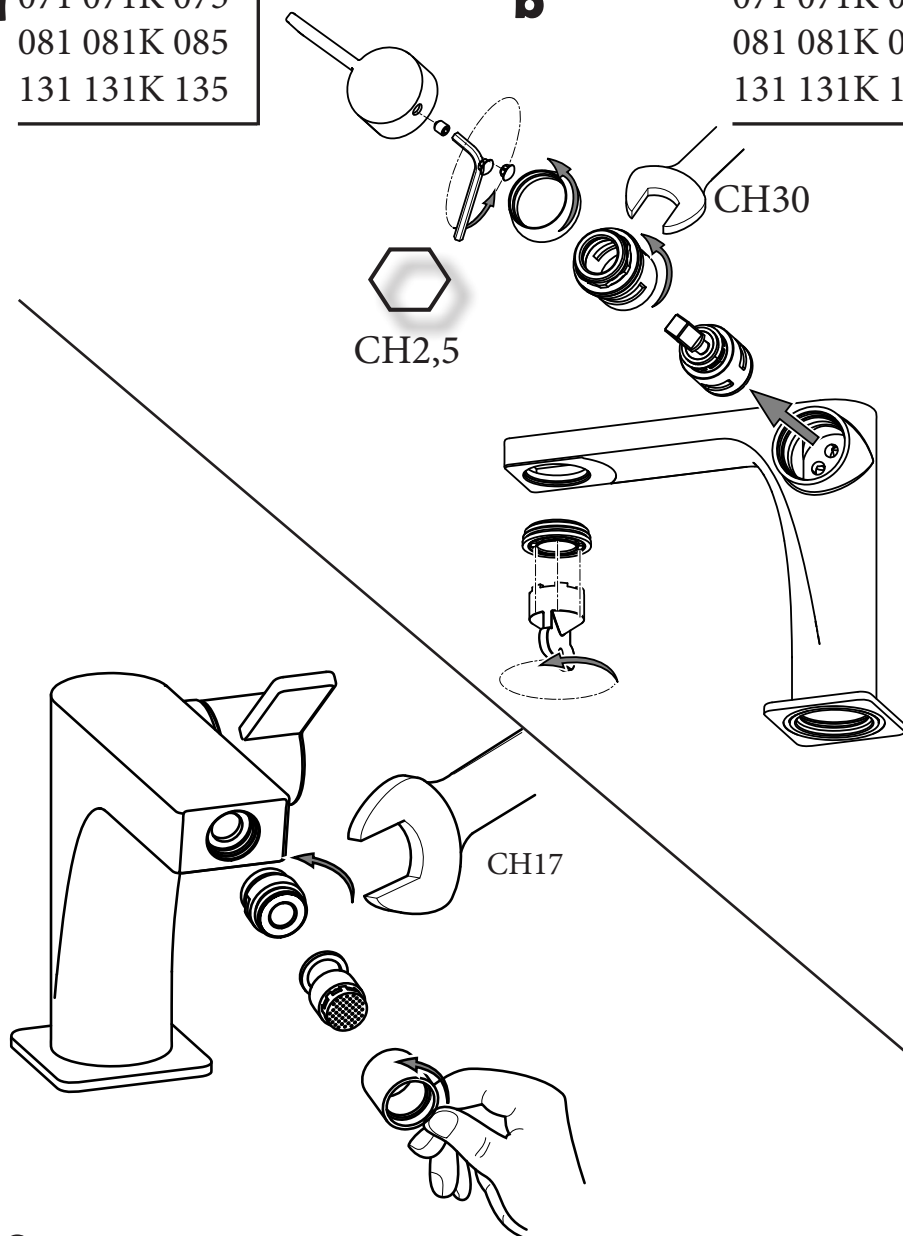

c Sostituzione Snodo How to replace Joint

131 131K 135