


ELLE

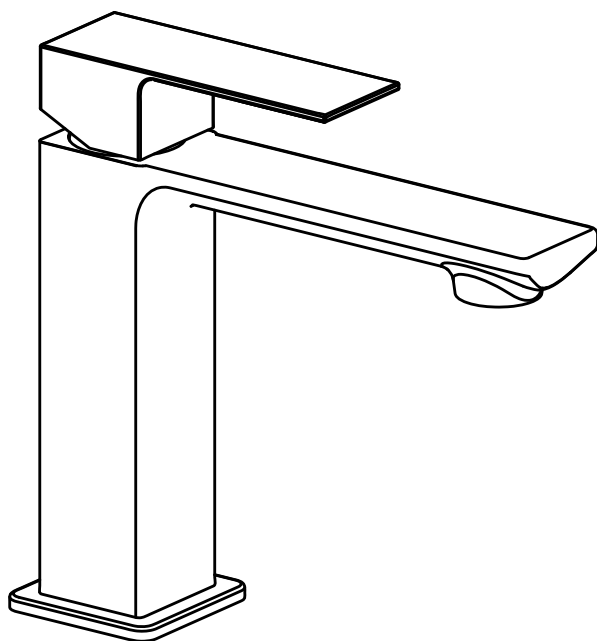


EL071H..
EL071HK..
EL075H..
EL073H..
EL074H..
EL074HK..
EL081H..
EL081HK..
EL085H..
EL131H..
EL131HK..
EL135H..



IST302
Rev.2024.00

1


Montaggio Assembly

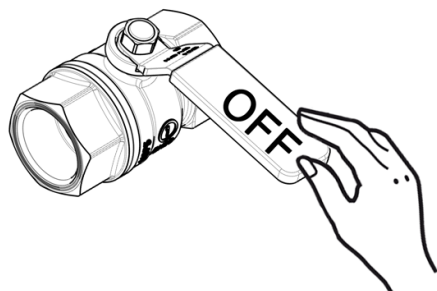

$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

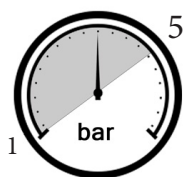


MIN - MAX




OK

2
a

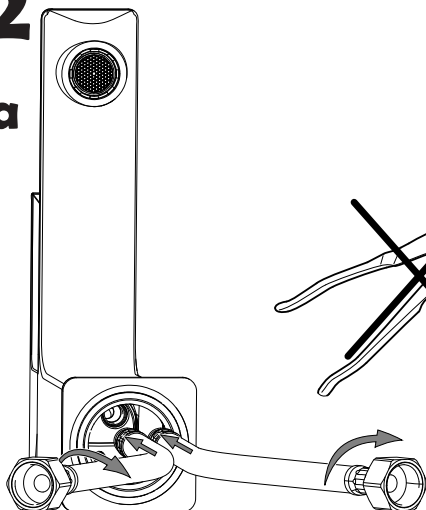


071 070 075
074 072 073
081 080 085
131 130 135

b

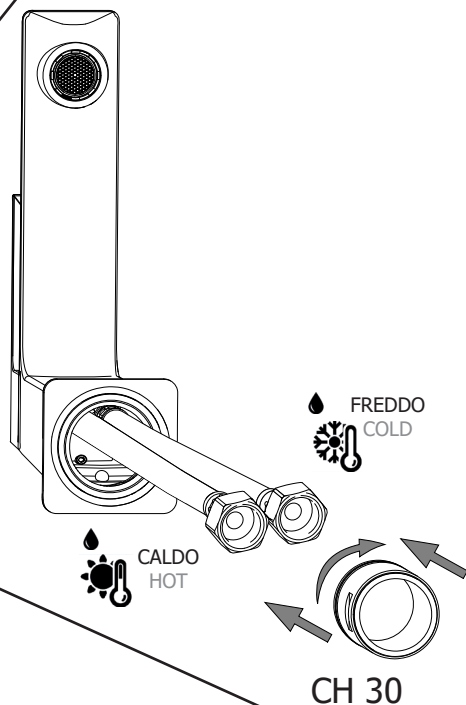

c

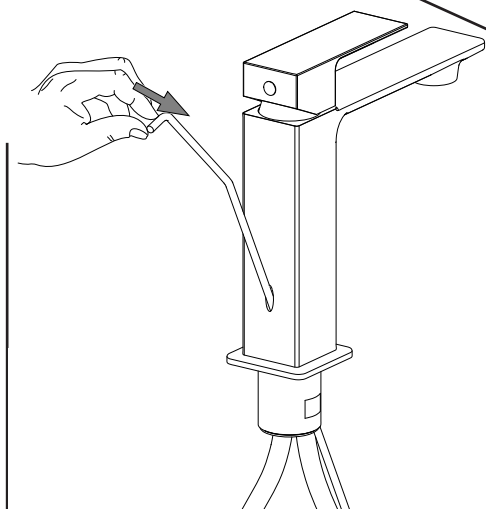

070 075
072 073
080 085
130 135




d

071 070 075

074 072 073



081 080 085

131 130 135

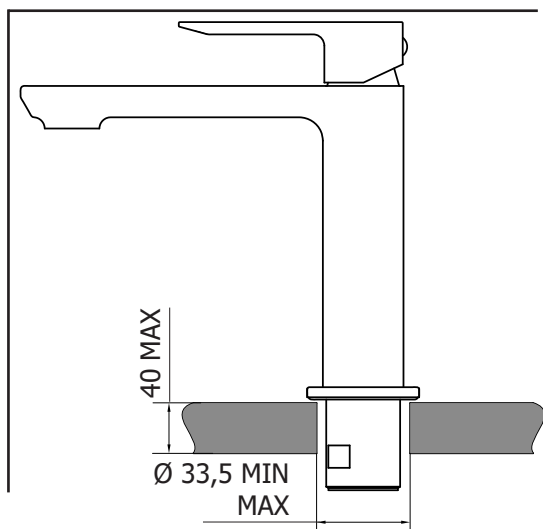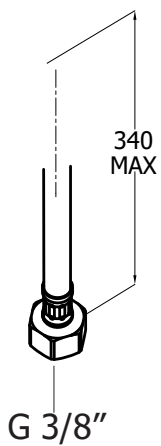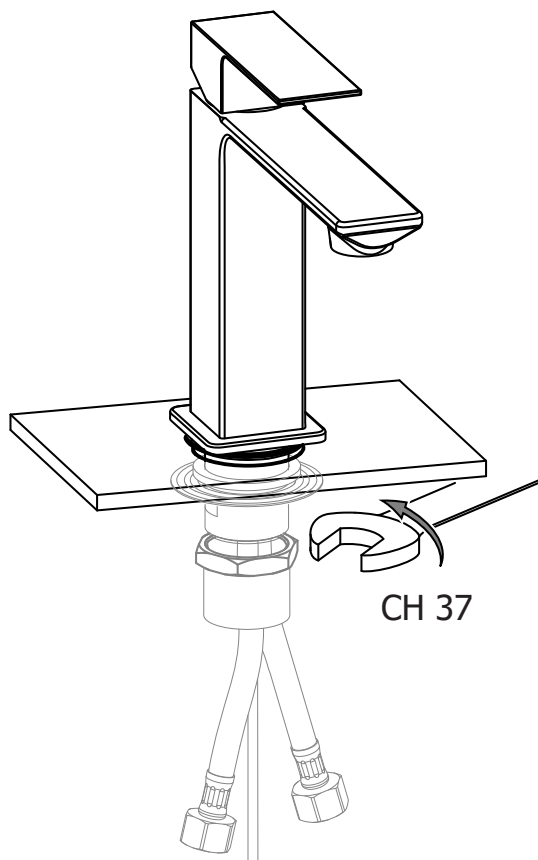

070 075
072 073
080 085
130 135


e

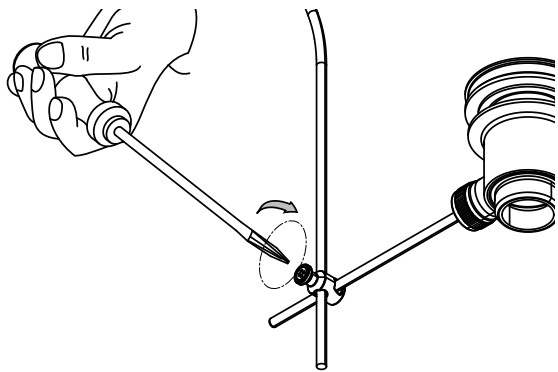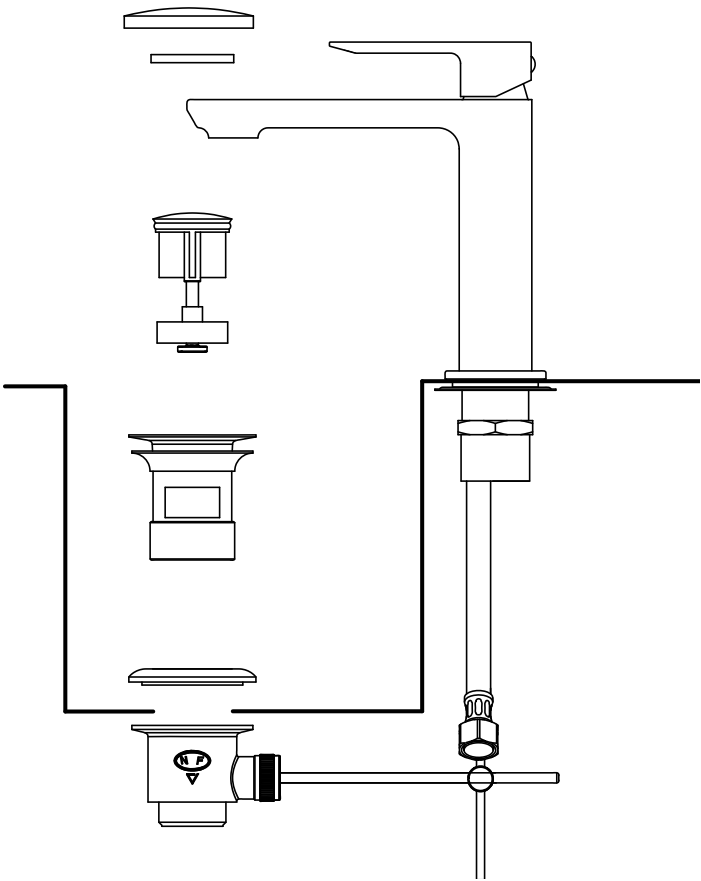

3



Fissaggio ZSCA050..
ZSCA050.. Assembly

071K..
081K..
131K..

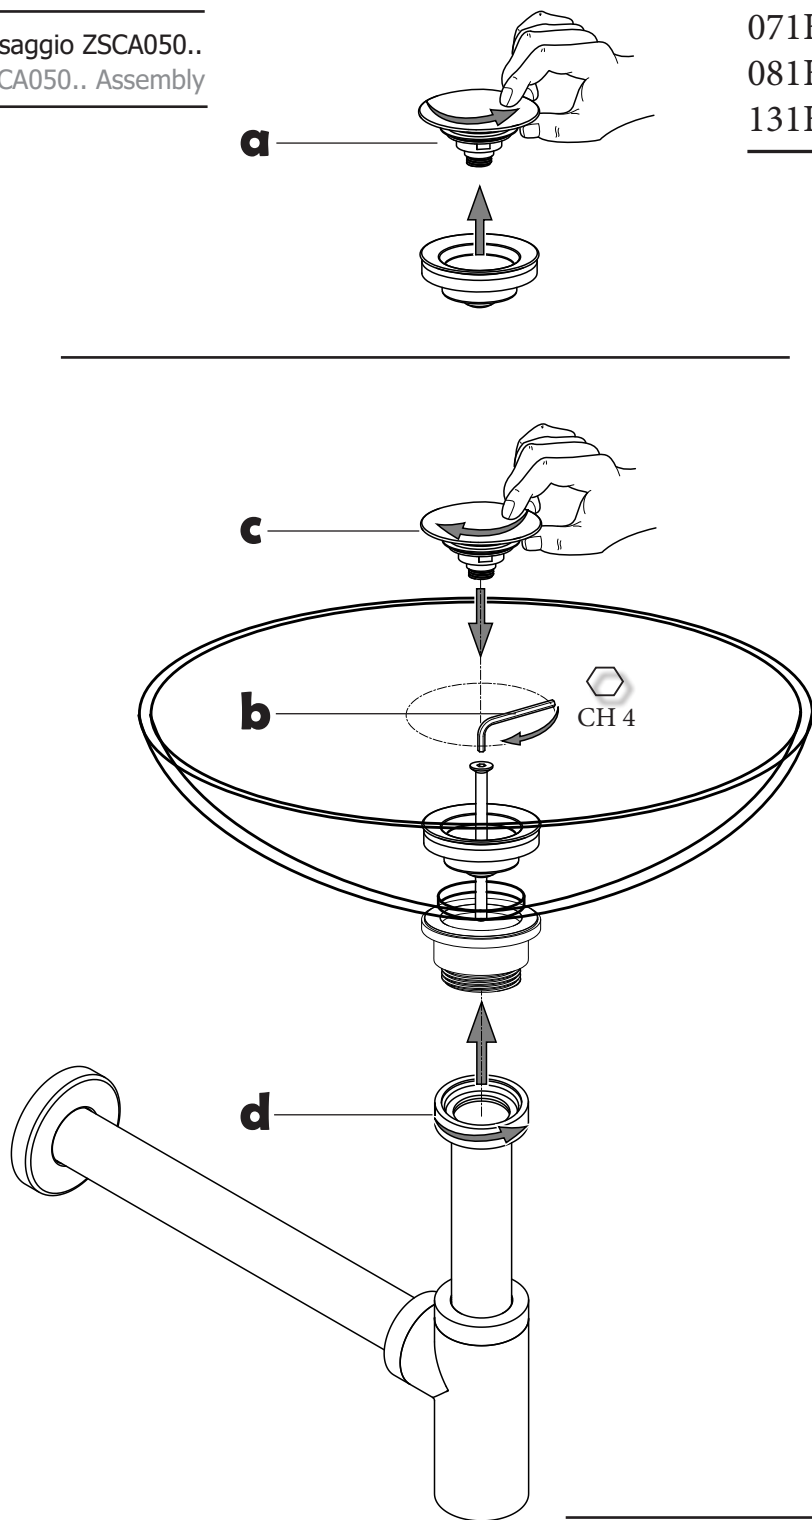







F

Funzionamento Working

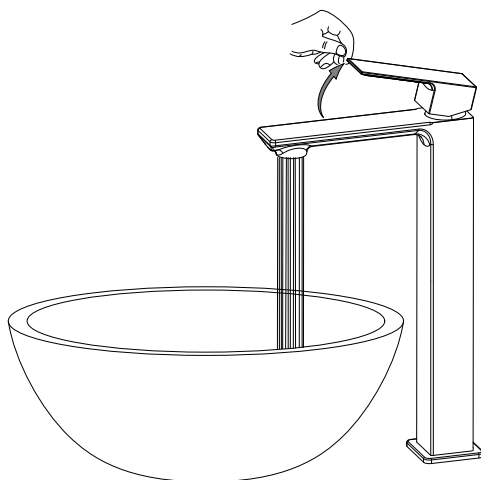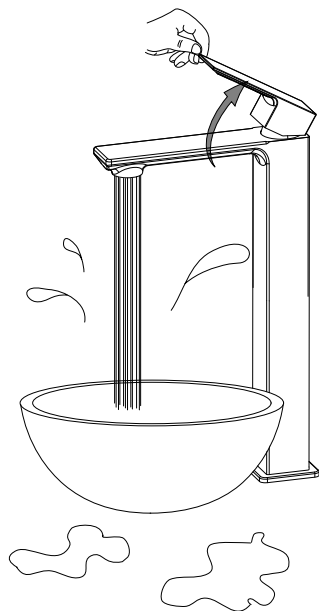

M

Manutenzione Service

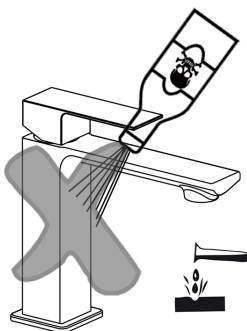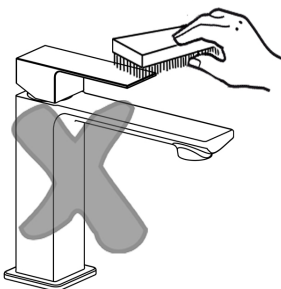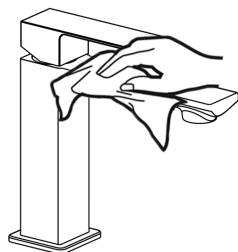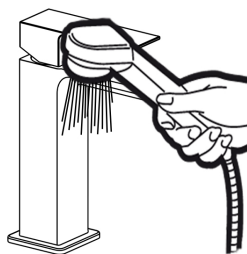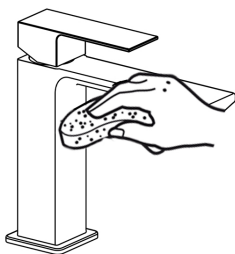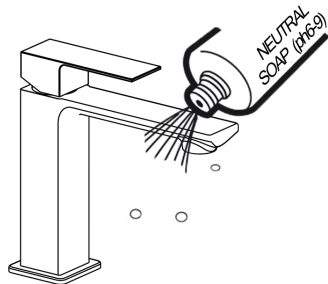

S a


Sostituzione Cartuccia How to replace Cartridge

071 070 075

074 072 073

081 080 085

131 130 135


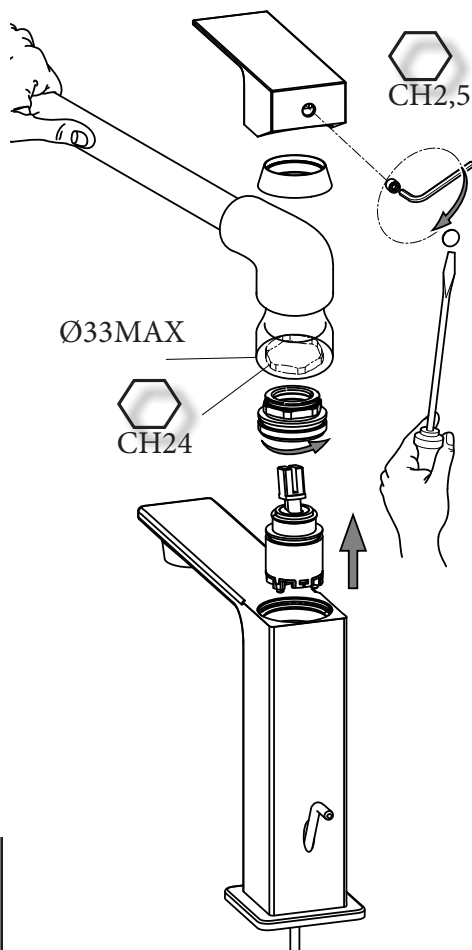
**b**

Sostituzione Aeratore How to replace Aerator

071 070 075

074 072 073

081 080 085

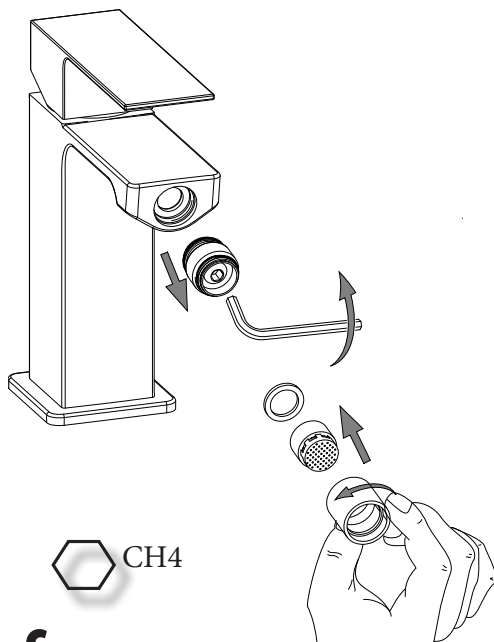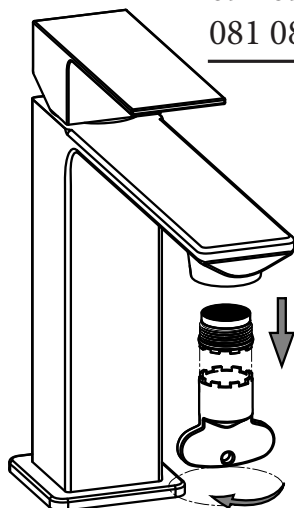**c**

Sostituzione Snodo How to replace Joint

131 130 135