

INOX

tech

AISI 316

INOX 071

INOX 071K

INOX 081


INOX 081K

INOX 131

INOX 131K

INOX 051


INOX 051K

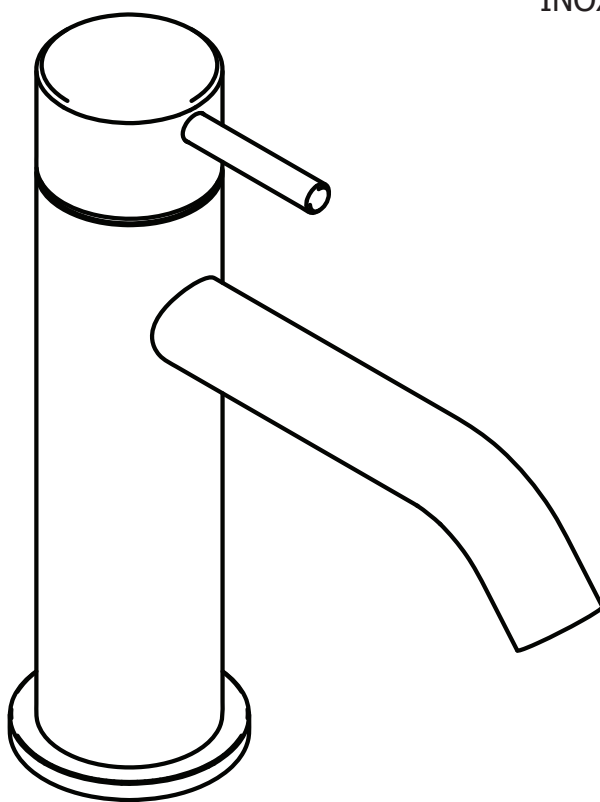

IST317
Rev.2025.01

1


Montaggio Assembly

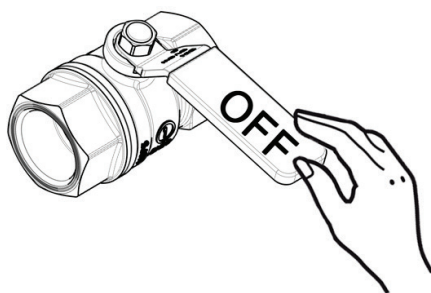


$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

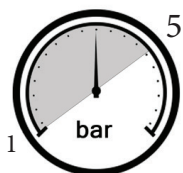


MIN - MAX

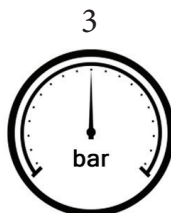


OK

2_a


1

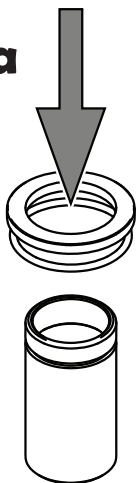

2

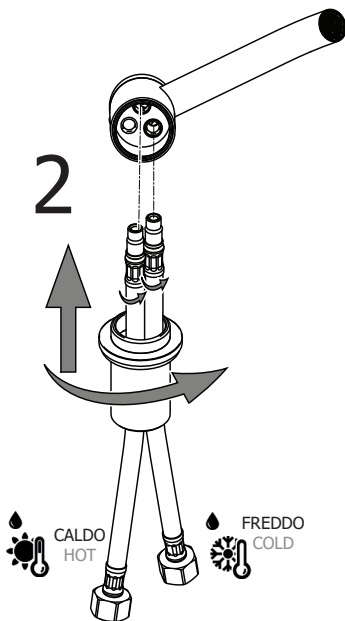


3

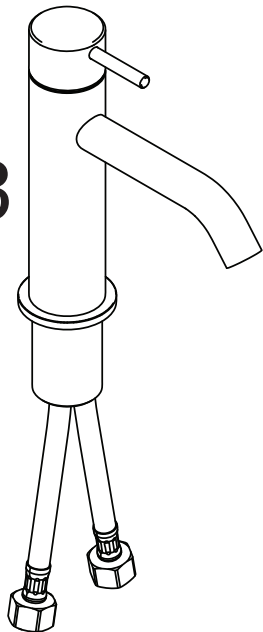


071
071K
081
081K
131
131K

2_b

 1




2

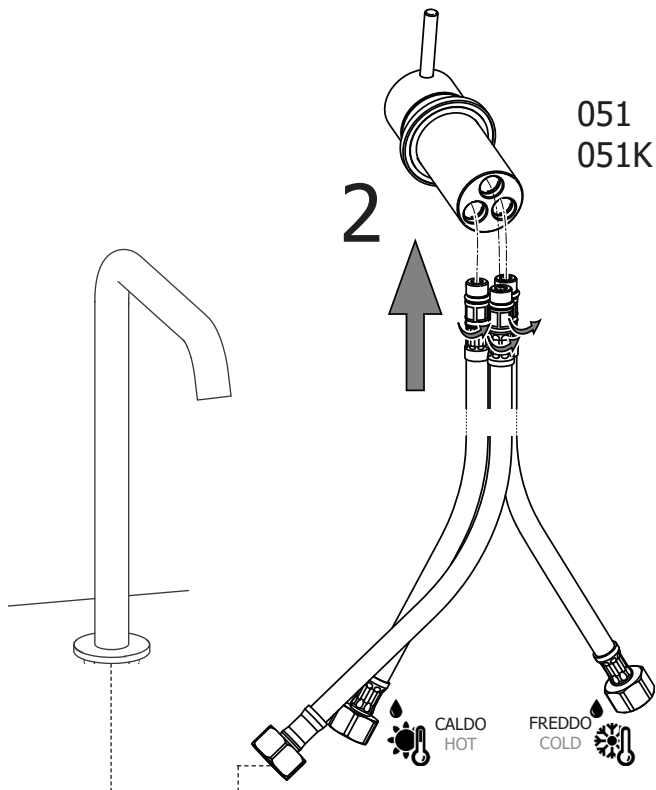


051
051K


3a

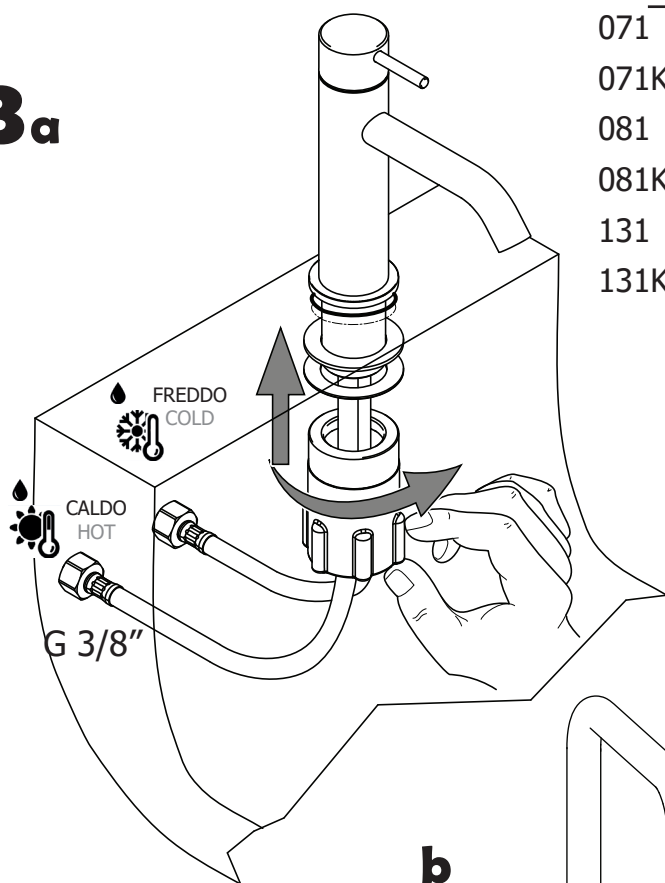

071
071K
081
081K
131
131K

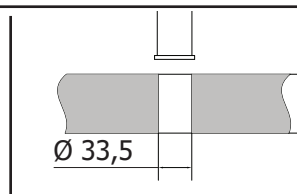


b

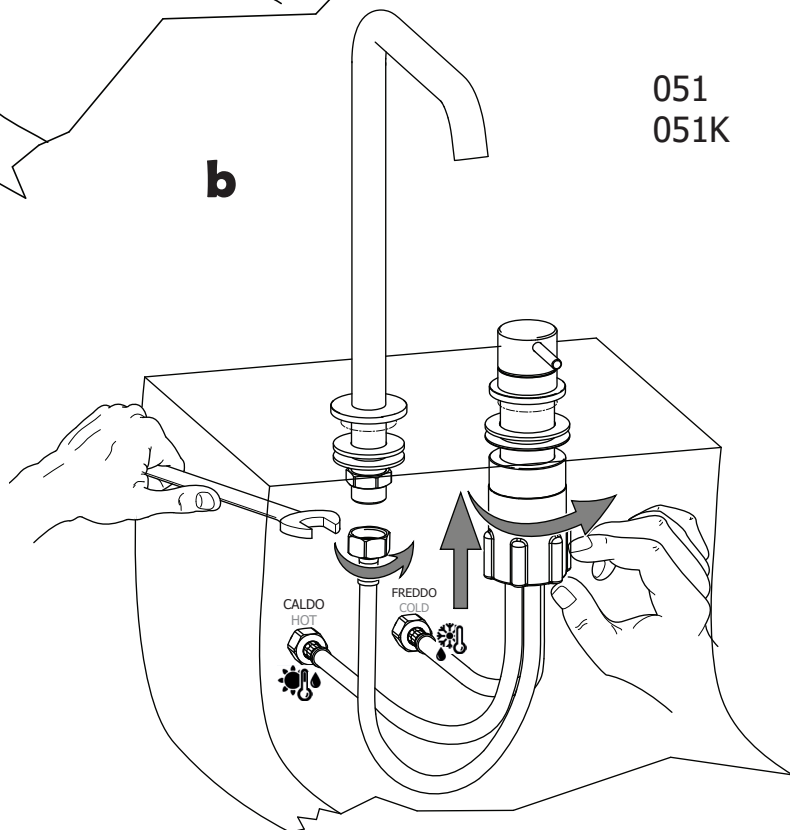


051
051K

071K..
081K..
131K..


1

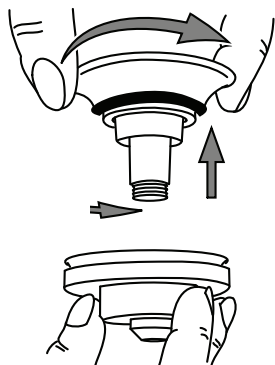



2

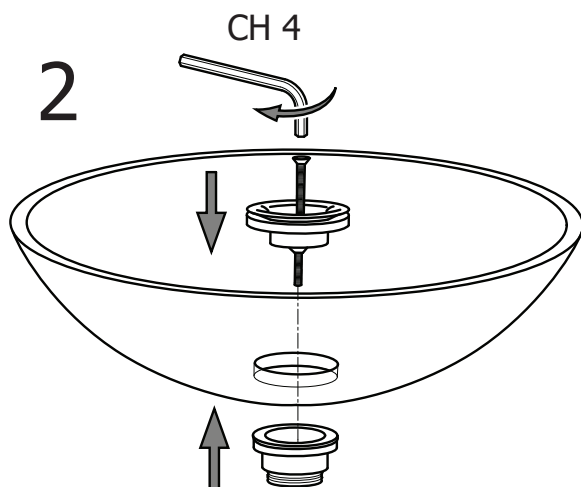

3






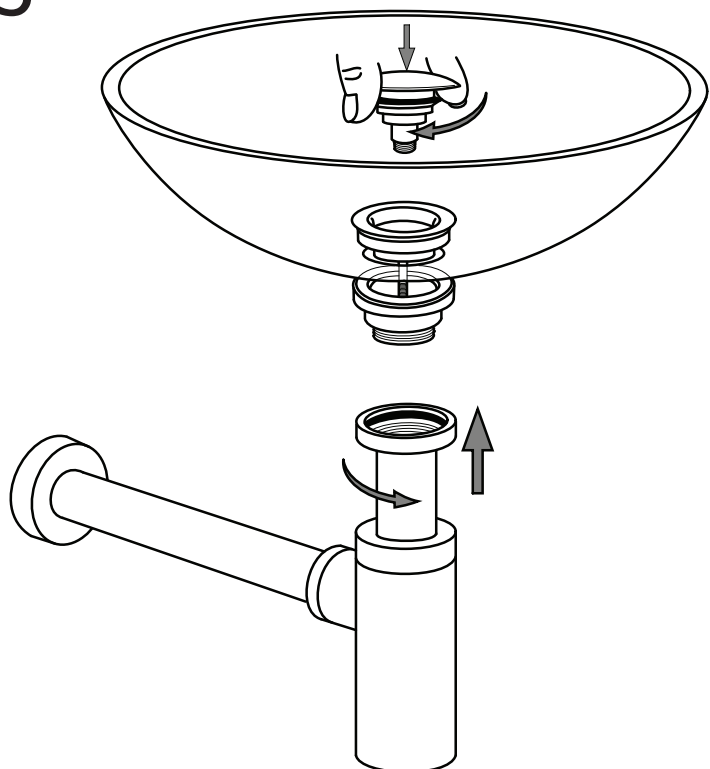


081
081K

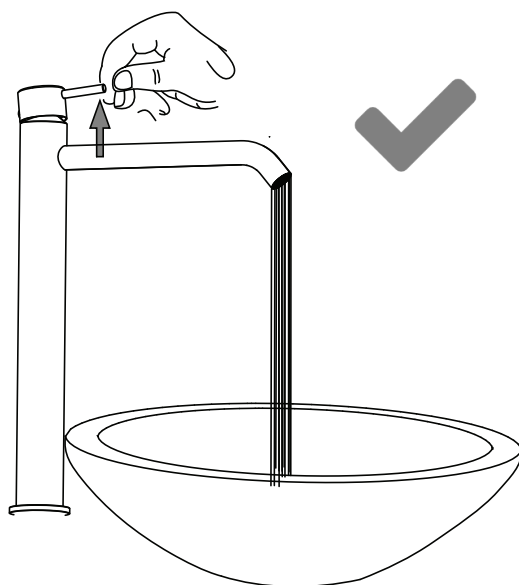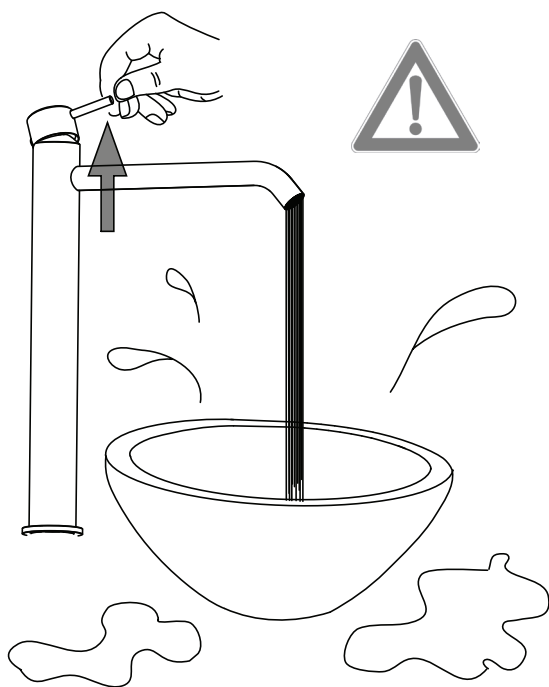





Manutenzione
Service

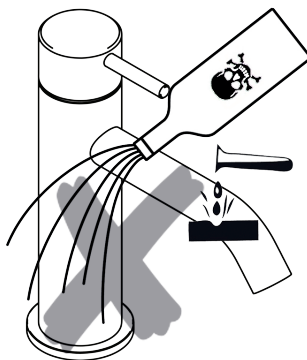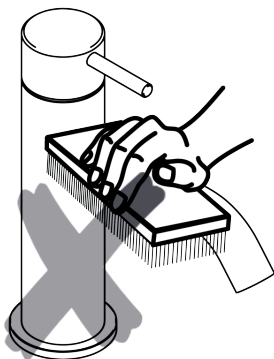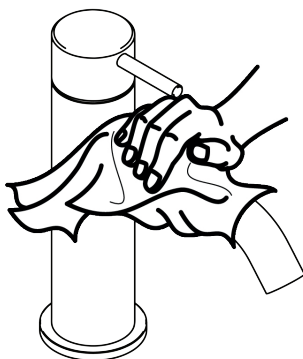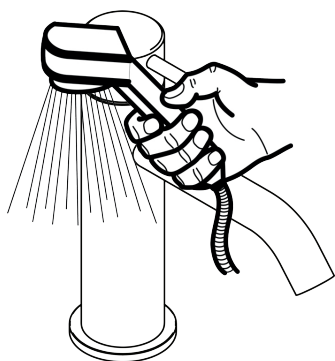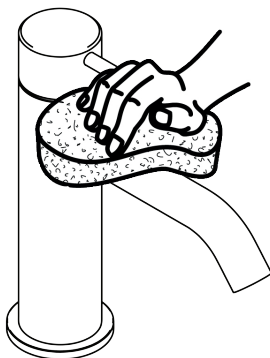
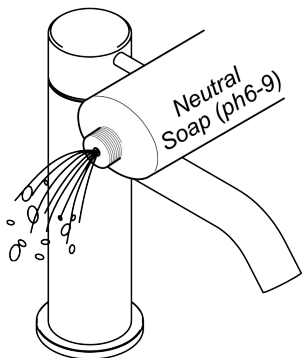




Sostituzione Cartuccia How to replace Cartridge

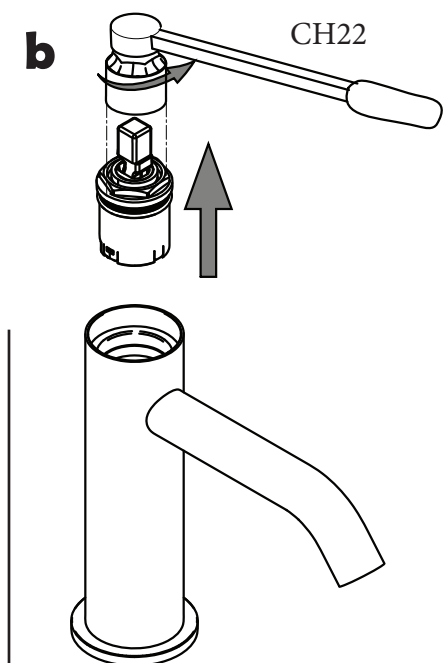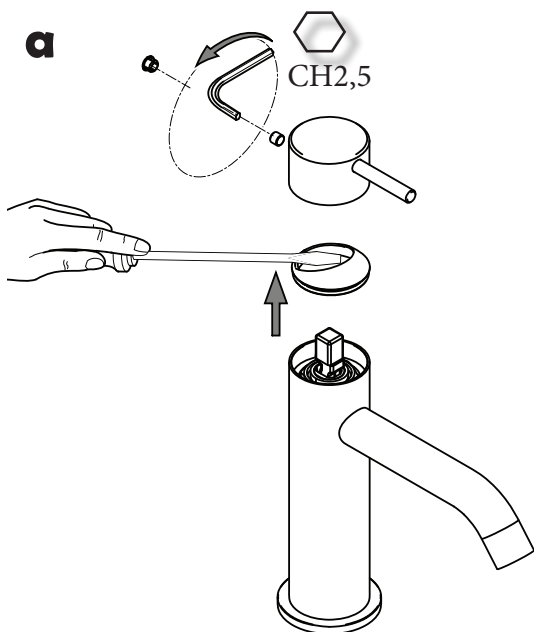

Sostituzione Aeratore How to replace Aerator

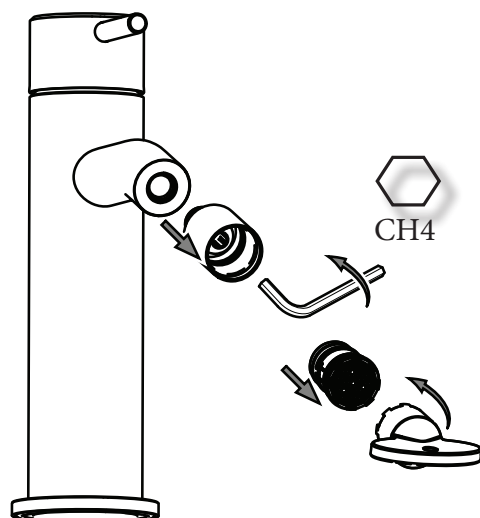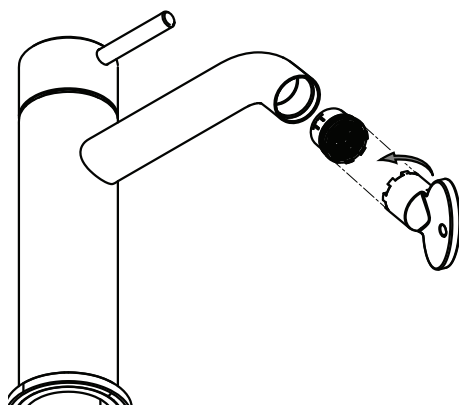

c
Sostituzione Snodo
How to replace Joint

131 131K