

STEEL


STEEL 075 AC

STEEL 071 AC

STEEL 081 AC

STEEL 135 AC


STEEL 131 AC

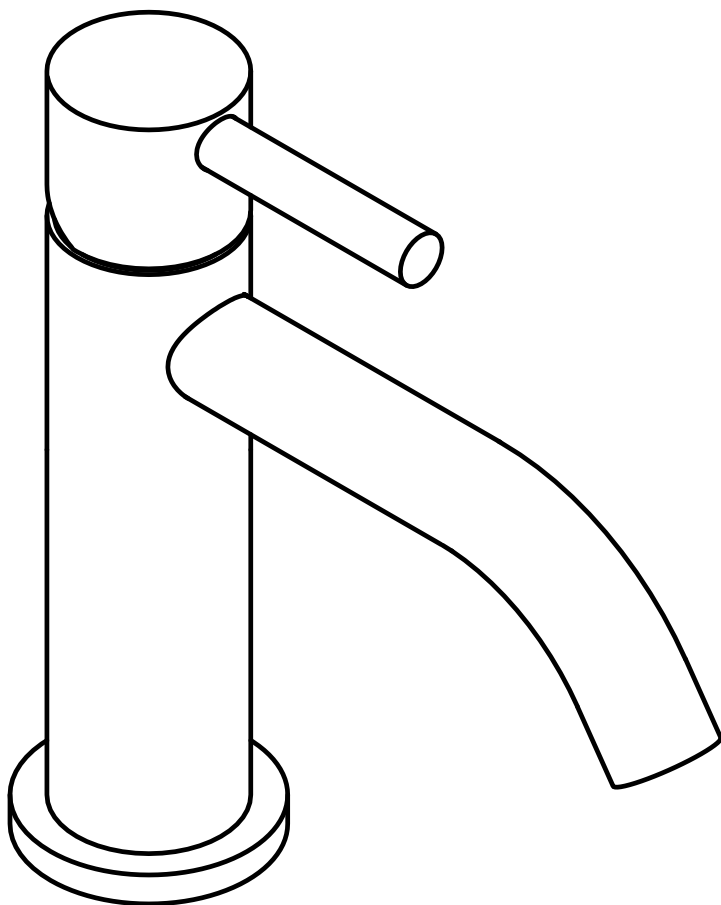

IST033
Rev.2016.01

1


Montaggio Assembly

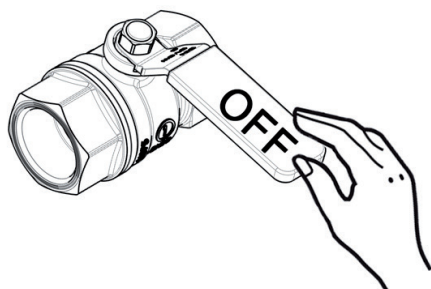

$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

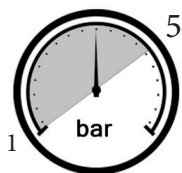

MIN - MAX




OK

2



a

071 075
081
131 135

b

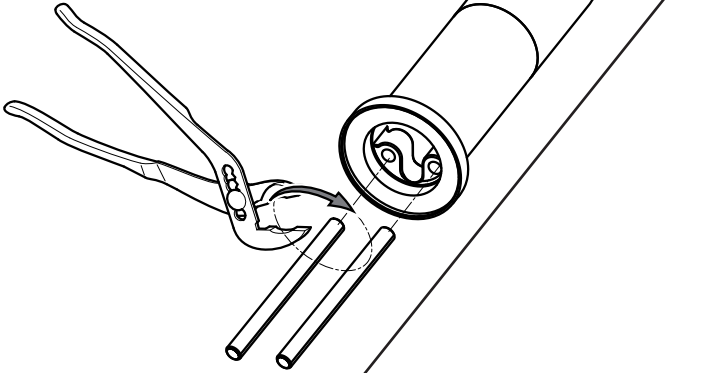


c

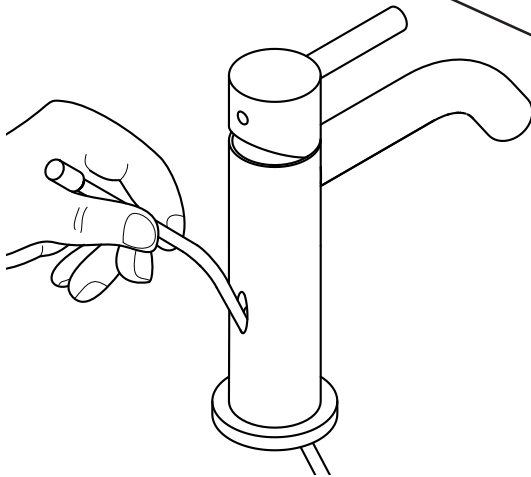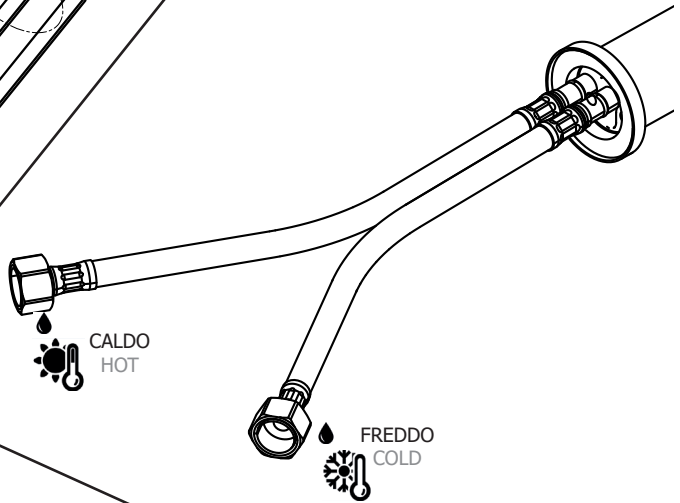


075
135

d

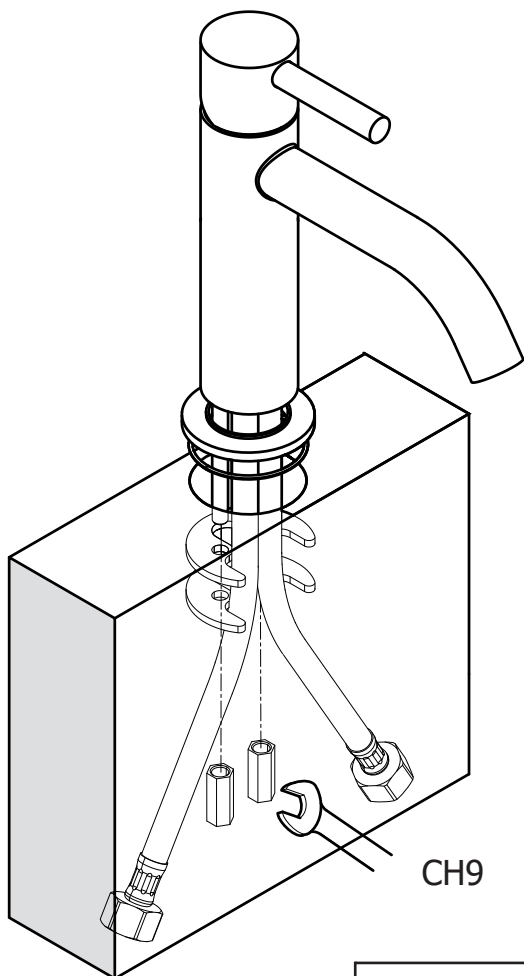


071 075
081
131 135

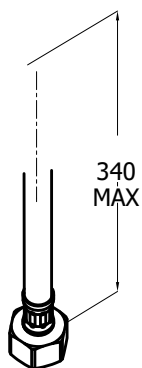

G 3/8"


CH9

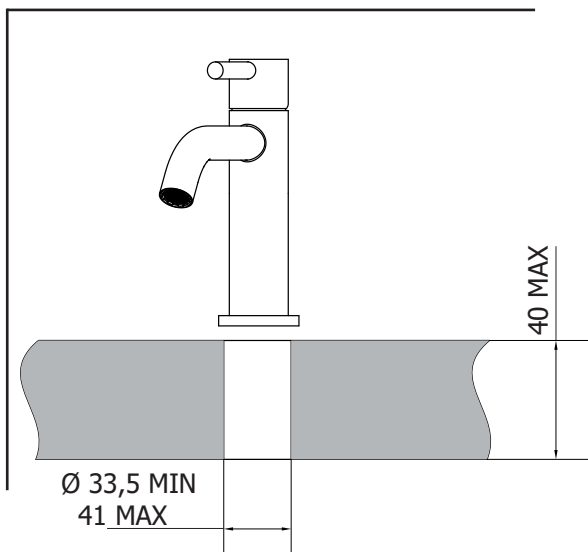


075

135


e

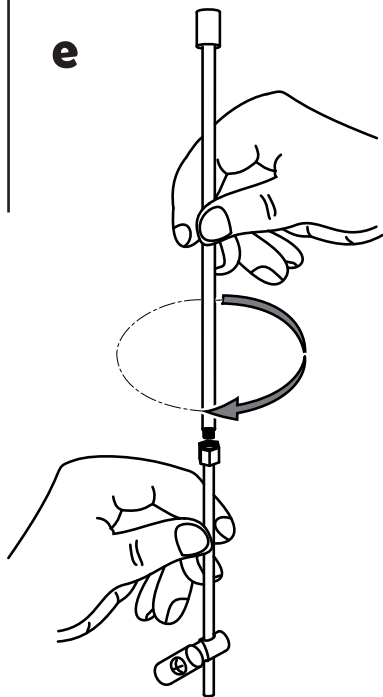


f

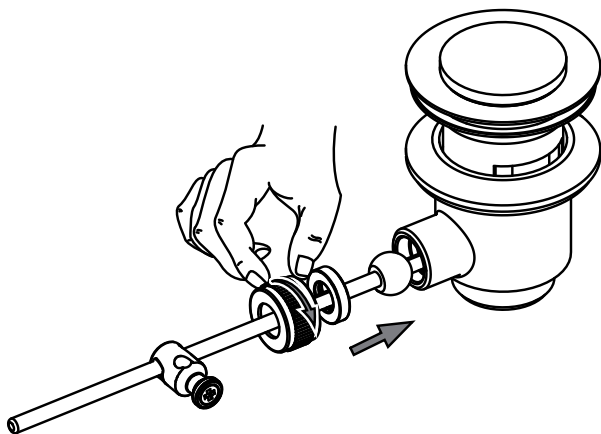

g

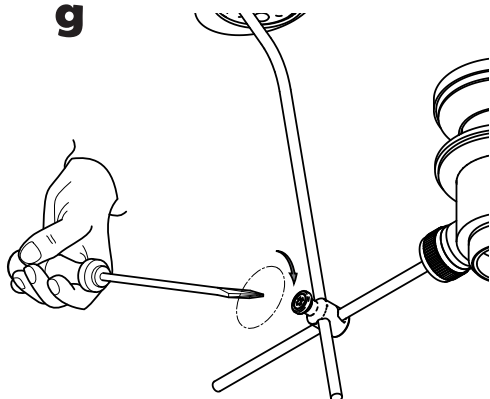

h

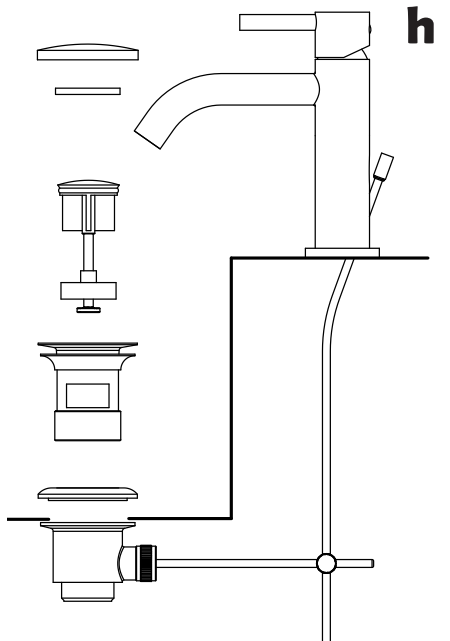





F

Funzionamento
Service

071

081

131

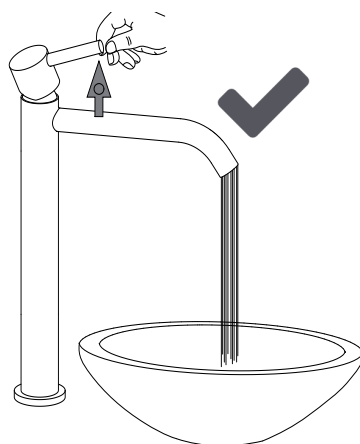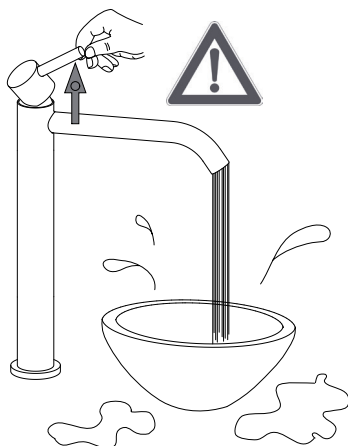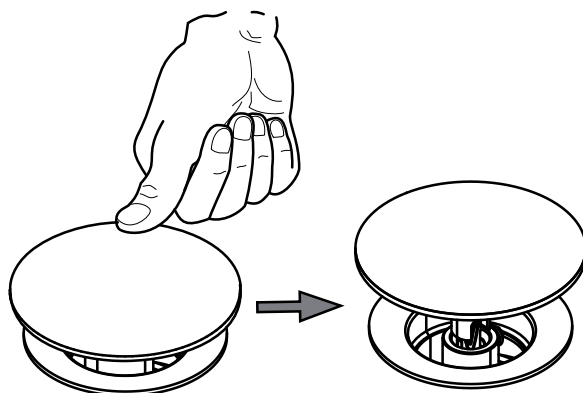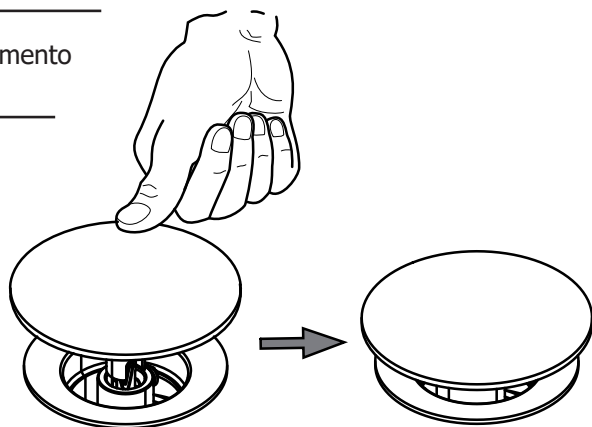

081









Manutenzione
Service

071 075


081

131 135

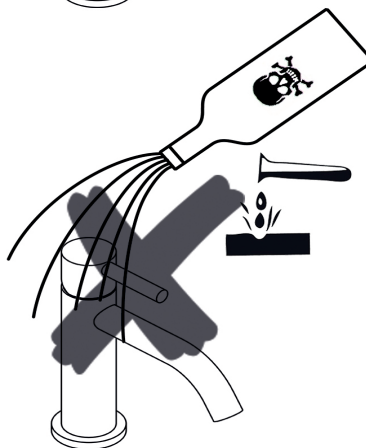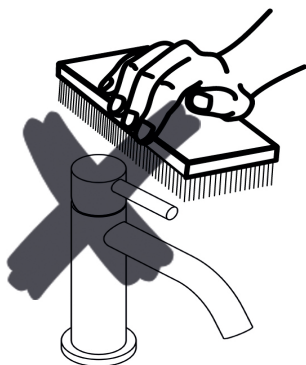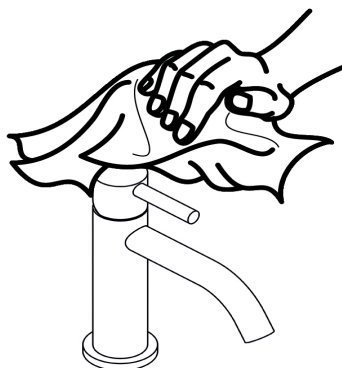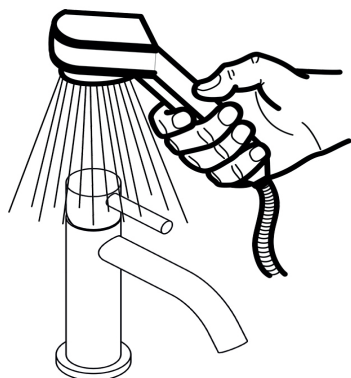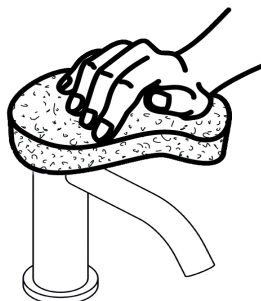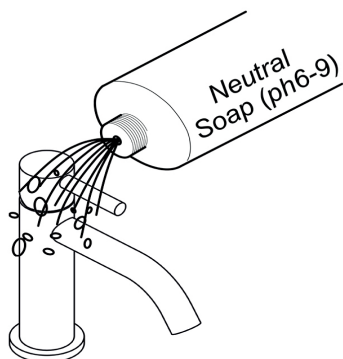

S Sostituzione Cartuccia How to replace Cartridge

a

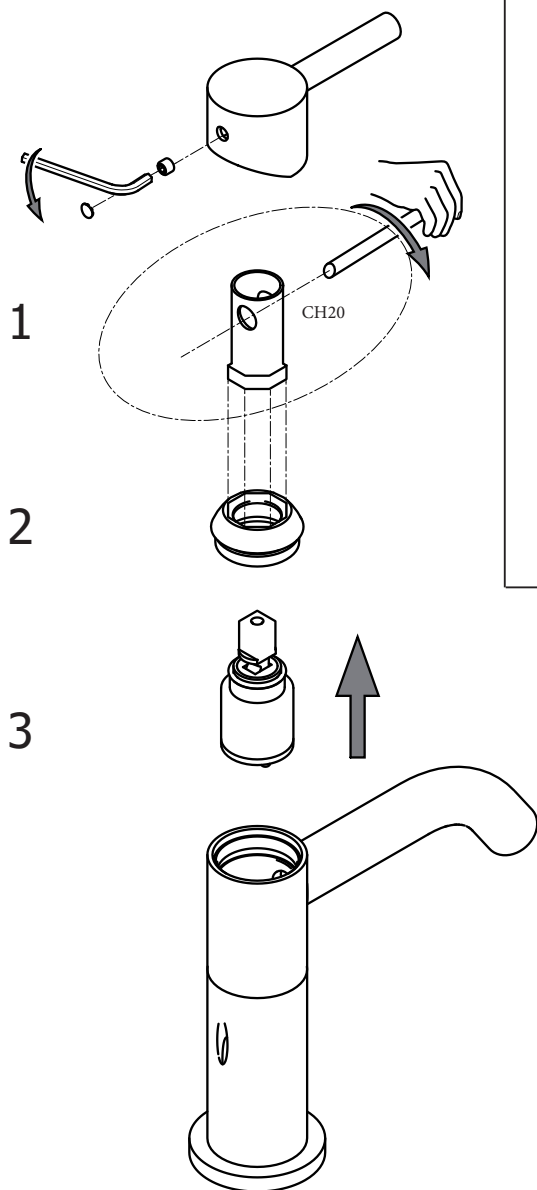


Sostituzione Aeratore How to replace Aerator

071 075

081

131 135

b

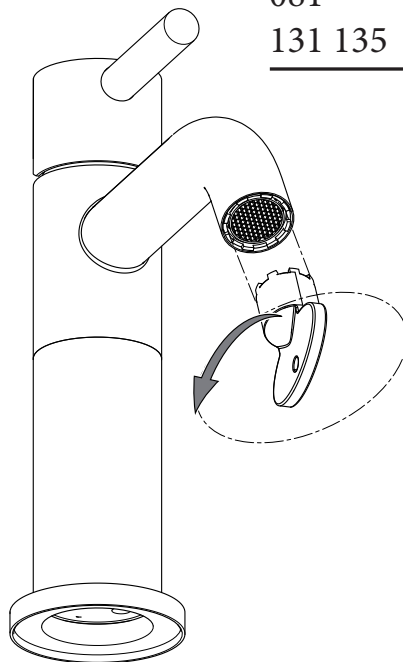

071 075

081

131 135