


COMPATIBILITY: QTV
IRV / VLV
NI
DA
FBLV
FCMV
FMEV

003..

 

008..

010..

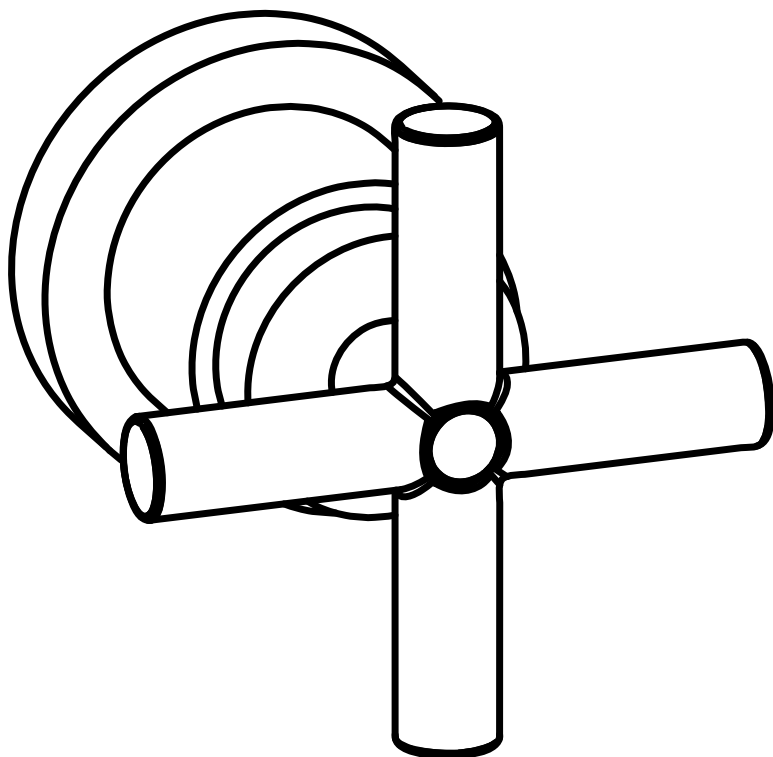


1


Montaggio Assembly

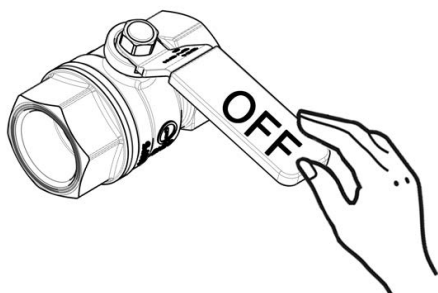

$65 \pm 5^{\circ}\text{C}$

 

$15 \pm 5^{\circ}\text{C}$

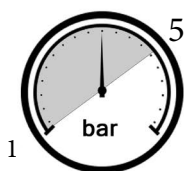


MIN - MAX



OK

2 a

010
003
008

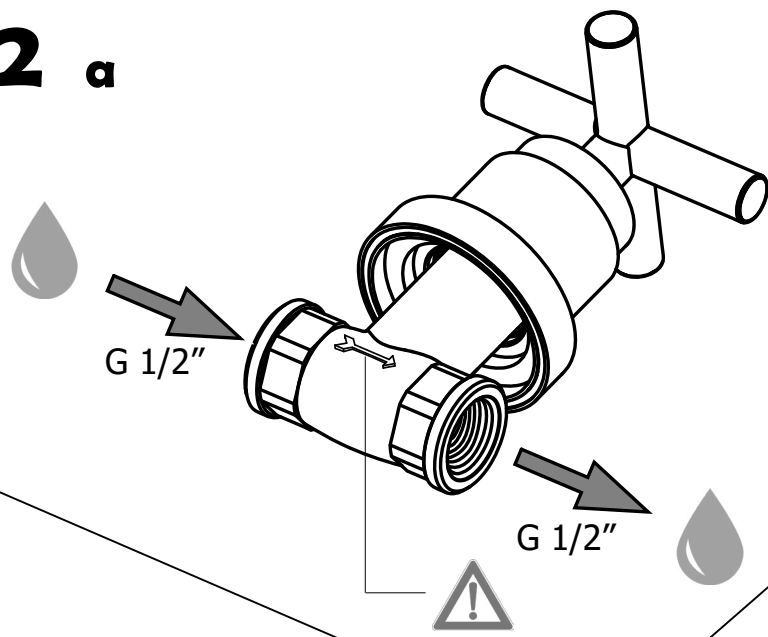




b

003
008

CALDO
HOT




FREDDO
COLD

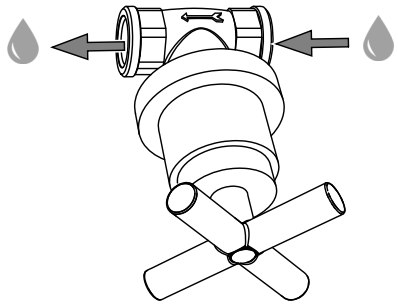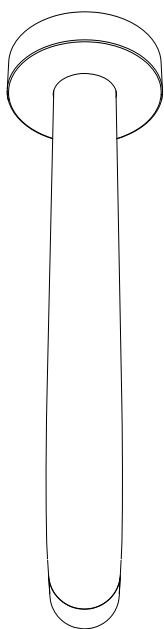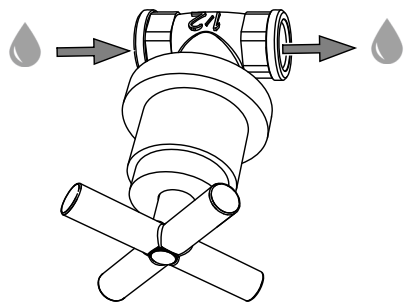


3

QTV

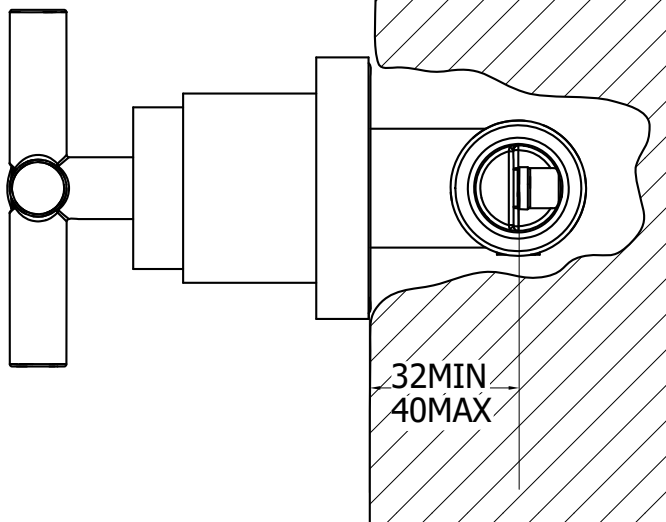


010
003
008


IRV

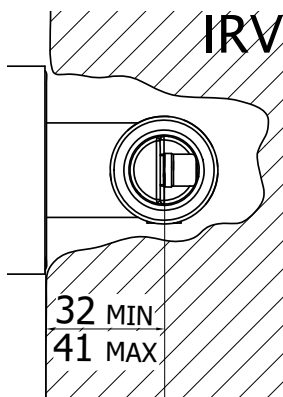


VLV

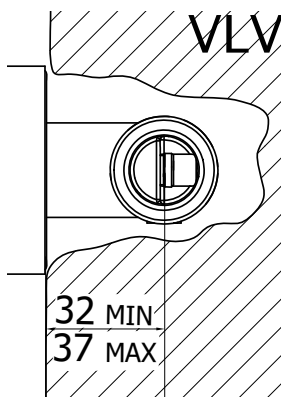

DA

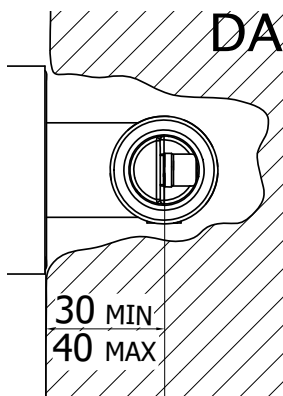


FBLV

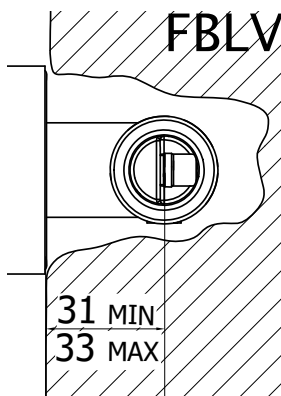


FCMV
FMEV

4

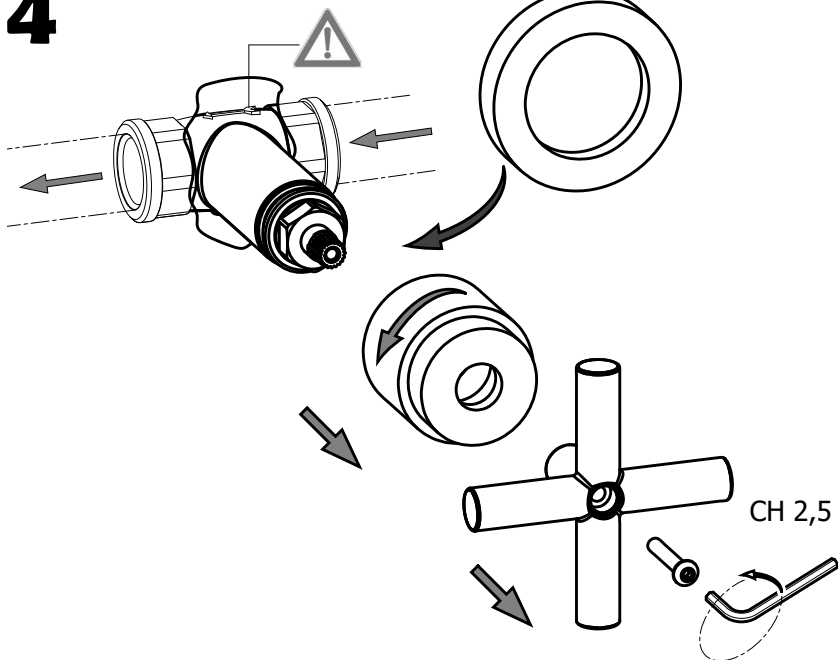


003
008

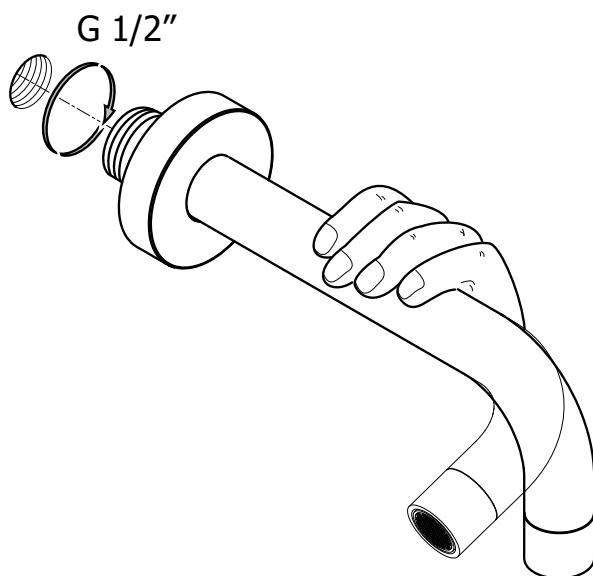







F

Funzionamento
Working

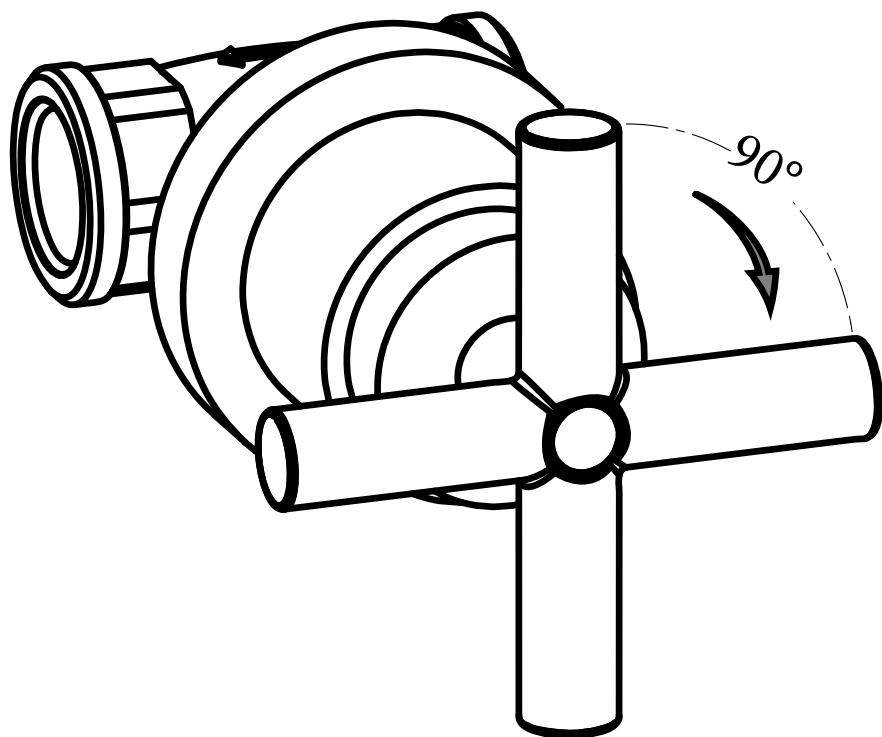



Manutenzione
Service

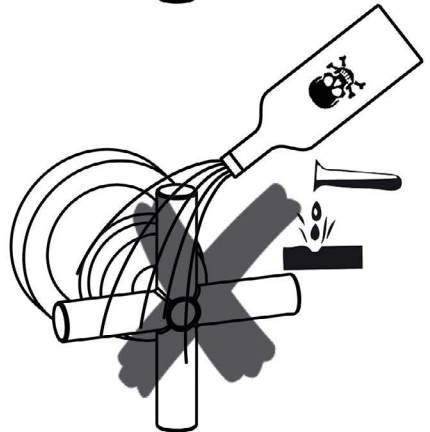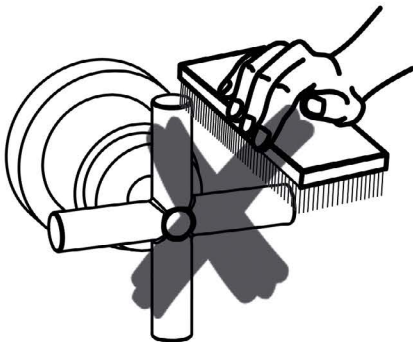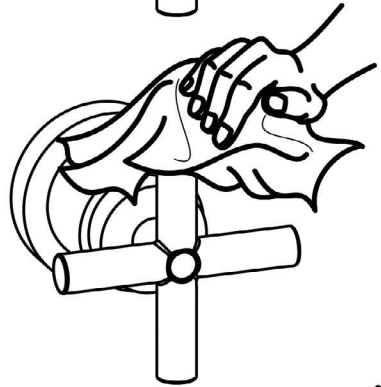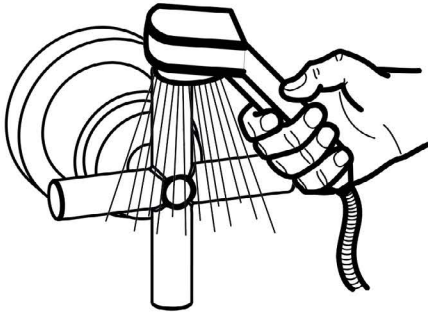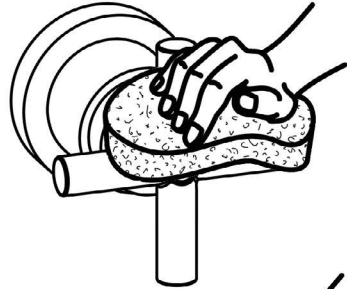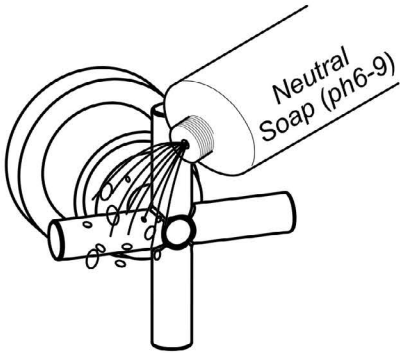




Sostituzione Vitone Ceramico How to replace Ceramic Disc Valve

010

003


008

a

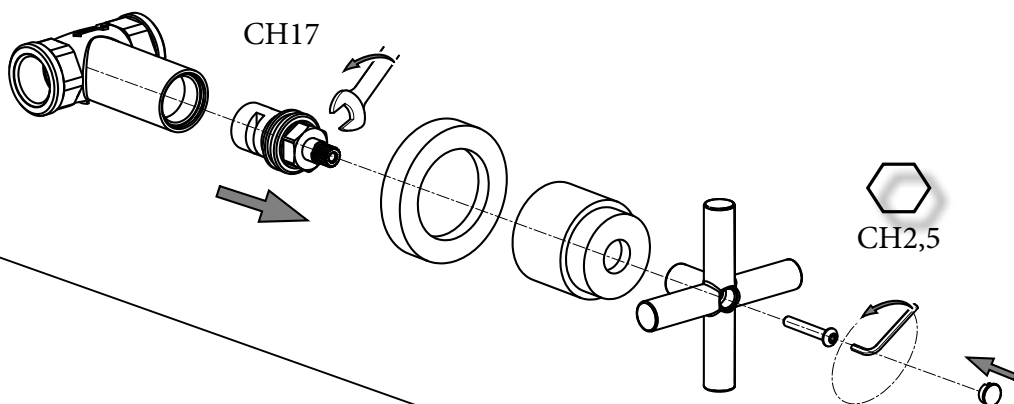

Sostituzione Aeratore How to replace Aerator

b

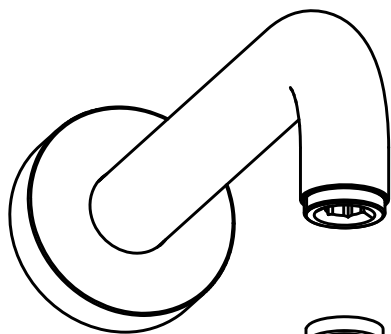

003

008

