


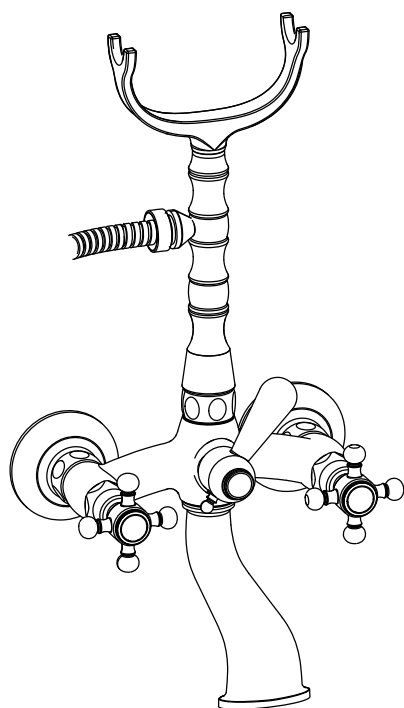

022..
 023..
 024..
 025..
 026..
 027..
 168..
 168D..
 168R..


COMPATIBILITY:

FBLV
 FMEV
 IRV
 VLV



1

Montaggio Assembly

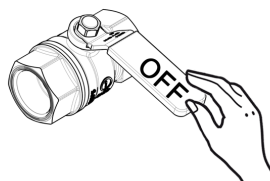

$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$



MIN - MAX




OK


2 a




CALDO
HOT

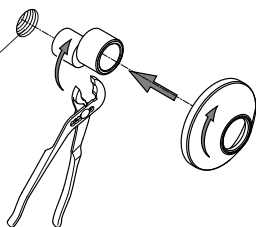


FREDDO
COLD

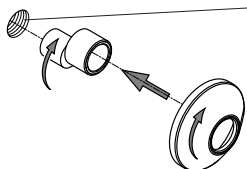

b

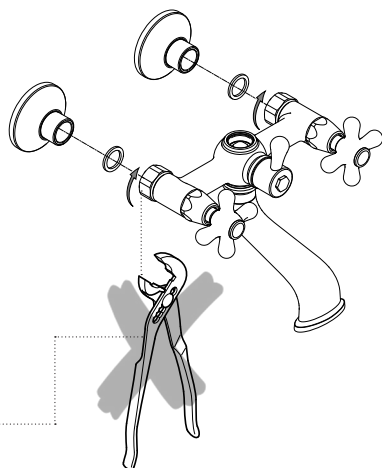

c



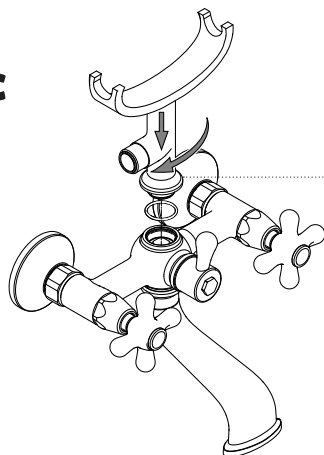


F






Funzionamento
Working

022 023 024


025 026 027

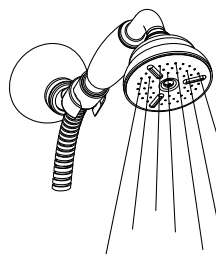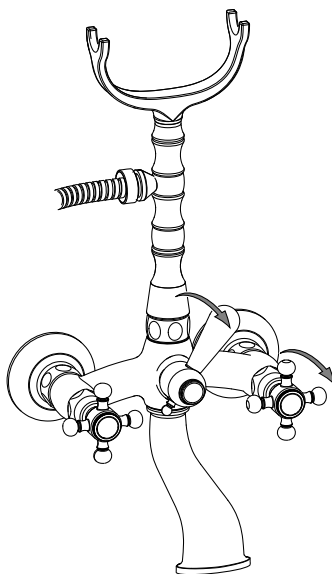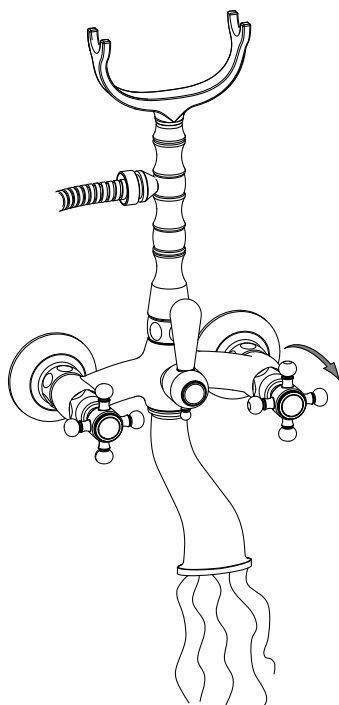**M**

Manutenzione
Service

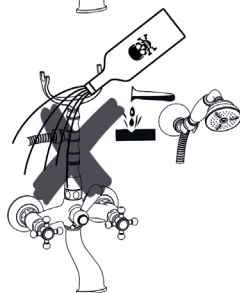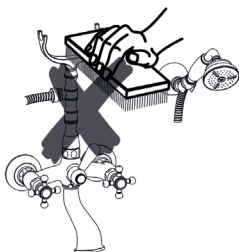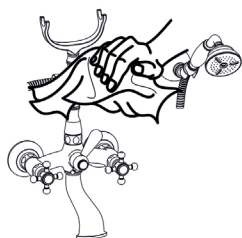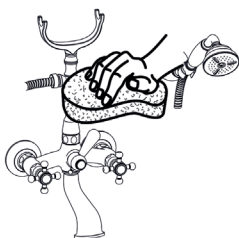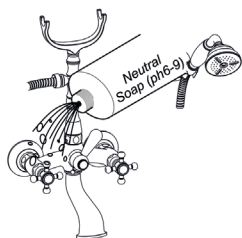

Sostituzione Deviatore
How to replace Diverter

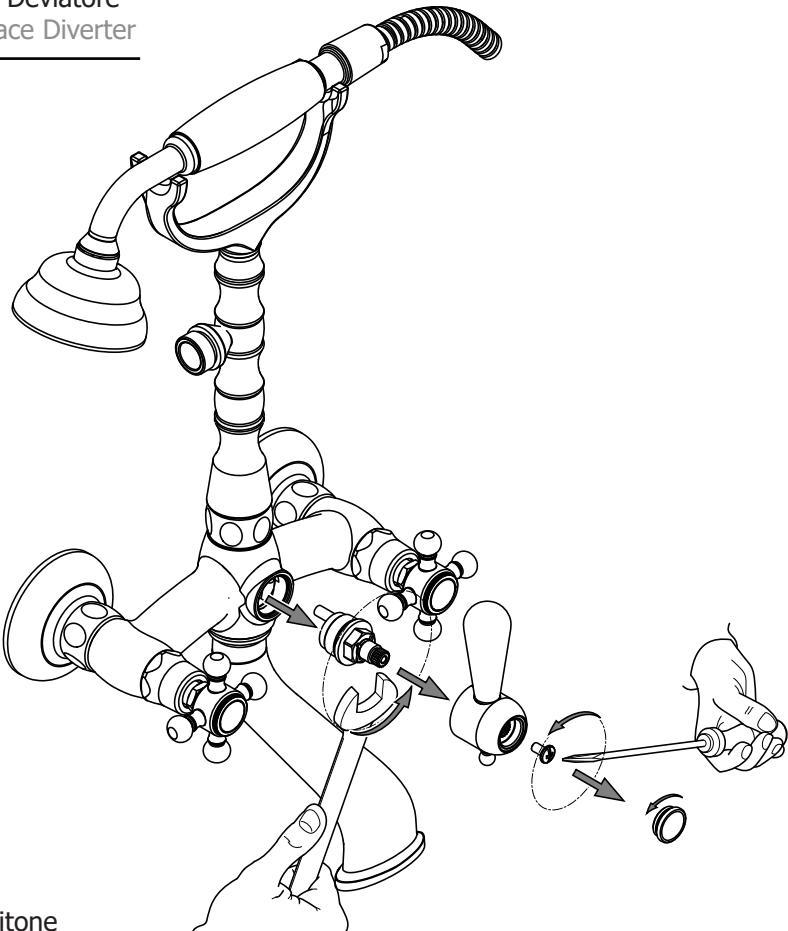

Sostituzione Vitone
How to replace ceramic valve

